

KICKSTARTS - (Version Numbers from Showconfig)  
 Both Chips and (Super)Kickstart Disks

Name	Part Number	Machine Used In
Kickstart V1.1 (31.??) Disk	327244-01	A1000 FloppyDisk
Kickstart V1.1 (31.??) Disk	327244-02	A1000 FloppyDisk
Kickstart V1.2 (33.180) Disk	??????-??	A1000 FloppyDisk
Kickstart V1.2 (33.180)	315093-01	A500, A2000
Kickstart V1.3g4 (34.4) Disk	??????-??	A1000 FloppyDisk
Kickstart V1.3 (34.5) Disk	317747-01	A1000 FloppyDisk
Kickstart V1.3 (34.5)	315093-02	A500, A2000, CDTV (LH5320H4 8827 D)
Kickstart V1.4 (3312.20085)	390630-01	A3000, AA3000 (32 Bit High Word)
Kickstart V1.4 (3312.20085)	390629-01	A3000, AA3000 (32 Bit Low Word)
Kickstart V2.0 (36.?) Disk	367245-02	A3000 SuperKickstart FloppyDisk
Kickstart V2.0 (??.??)	390629-02	A3000 (32 Bit Low Word) ROM0V5
Kickstart V2.0 (??.??)	390630-02	A3000 (32 Bit High Word) ROM1V5
Kickstart V2.04 (37.175) Disk	367245-06	A3000 SuperKickstart FloppyDisk
Kickstart V2.04 (37.175)	390630-03	A3000 (32 Bit High Word)
Kickstart V2.04 (37.175)	390629-03	A3000 (32 Bit Low Word)
Kickstart V2.04 (37.175)	390976-01	???
Kickstart V2.04 (37.175)	390979-01	???, A2000
Kickstart V2.04 (37.175)	363968-01	??? (w/wire)
Kickstart V2.05 (37.299)	391388-01	A600
Kickstart V2.05 (37.350)	391304-02	A600, A600HD
Kickstart V3.0 (39.106)	391524-01	A1200 (ROM 0)
Kickstart V3.0 (39.106)	391523-01	A1200 (ROM 1)
Kickstart	391513-01	??
Kickstart	391514-01	??
Kickstart V3.0 (39.106)	319513-02	A4000 (ROM 1 D0-D15 LOW)
Kickstart V3.0 (39.106)	319514-02	A4000 (ROM 0 D16-D31 HIGH)
Kickstart V3.1 (40.60)	391640-03	CD32
Kickstart V3.1 (40.70)	391657-01	A4000T (Amiga 1995)
Kickstart V3.1 (40.70)	391658-01	A4000T (Amiga 1995)