
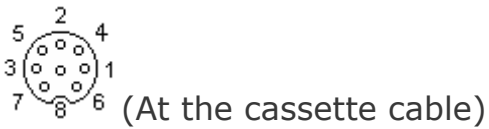


MSX Cassette

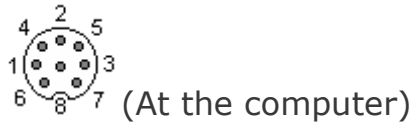

8 PIN DIN (DIN45326) FEMALE at the computer.
8 PIN DIN (DIN45326) MALE at the cassette cable.

Pin	Name	Dir	Description
1	GND	—	Ground
2	GND	—	Ground
3	GND	—	Ground
4	CMTOUT	→	Sound Output
5	CMTIN	←	Sound Input
6	REM+	→	Remote control (from relay)
7	REM-	→	Remote control (from relay)
8	GND	—	Ground

Note: Direction is Computer relative Cassette.